

# SMART Digital - DDE

Installation and operating instructions



## Declaration of conformity

### GB: EC declaration of conformity

We, Grundfos, declare under our sole responsibility that the products DDA, DDC and DDE, to which this declaration relates, are in conformity with these Council directives on the approximation of the laws of the EC member states:

- Machinery Directive (2006/42/EC).  
Standards used: EN 809: 1998, EN ISO 12100-1+A1: 2009, EN ISO 12100-2+A1: 2009.
  - Low Voltage Directive (2006/95/EC). \*  
Standard used: EN 61010-1: 2001 (second edition).
  - EMC Directive (2004/108/EC).  
Standards used: EN 61326-1: 2006, EN 61000-3-2: 2006+A1: 2009+A2: 2009, EN 61000-3-3: 2008.
- \* Only for products with operating voltage > 50 VAC or > 75 VDC.

This EC declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions.

### BG: ЕС декларация за съответствие

Ние, фирма Grundfos, заявяваме с пълна отговорност, че продуктите DDA, DDC и DDE, за които се отнася настоящата декларация, отговарят на следните указания на Съвета за уеднаквяване на правните разпоредби на държавите членки на ЕС:

- Директива за машините (2006/42/EC).  
Приложени стандарти: EN 809: 1998, EN ISO 12100-1+A1: 2009, EN ISO 12100-2+A1: 2009.
  - Директива за нисковолтови системи (2006/95/EC). \*  
Приложен стандарт: EN 61010-1: 2001 (второ издание).
  - Директива за електромагнитна съвместимост (2004/108/EC).  
Приложени стандарти: EN 61326-1: 2006, EN 61000-3-2: 2006+A1: 2009+A2: 2009, EN 61000-3-3: 2008.
- \* Само за продукти, работещи при напрежение > 50 VAC или > 75 VDC.

Тазя ЕС декларация за съответствие е валидна само когато е публикувана като част от инструкциите за монтаж и експлоатация на Grundfos.

### CZ: ES prohlášení o shodě

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobky DDA, DDC a DDE, na něž se toto prohlášení vztahuje, jsou v souladu s ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství v oblastech:

- Směrnice pro strojní zařízení (2006/42/ES).  
Použité normy: EN 809: 1998, EN ISO 12100-1+A1: 2009, EN ISO 12100-2+A1: 2009.
- Směrnice pro nízkonapěťové aplikace (2006/95/ES). \*  
Použitá norma: EN 61010-1: 2001 (druhé vydání).
- Směrnice pro elektromagnetickou kompatibilitu (EMC) (2004/108/ES).  
Použité normy: EN 61326-1: 2006, EN 61000-3-2: 2006+A1: 2009+A2: 2009, EN 61000-3-3: 2008.

\* Pouze pro výrobky s provozním napětím > 50 VAC nebo > 75 VDC.

Toto ES prohlášení o shodě je platné pouze tehdy, pokud je zveřejněno jako součást instalačních a provozních návodů Grundfos.

### DK: EF-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produkterne DDA, DDC og DDE som denne erklæring omhandler, er i overensstemmelse med disse af Rådets direktiver om indbyrdes tilnærmelse til EF-medlemsstaternes lovgivning:

- Maskindirektivet (2006/42/EF).  
Anvendte standarder: EN 809: 1998, EN ISO 12100-1+A1: 2009, EN ISO 12100-2+A1: 2009.
- Lavspændingsdirektivet (2006/95/EF). \*  
Anvendt standard: EN 61010-1: 2001 (anden udgave).
- EMC-direktiv (2004/108/EF).  
Anvendte standarder: EN 61326-1: 2006, EN 61000-3-2: 2006+A1: 2009+A2: 2009, EN 61000-3-3: 2008.

\* Gælder kun for produkter med driftsspænding > 50 VAC eller > 75 VDC.

Denne EF-overensstemmelseserklæring er kun gyldig når den publiceres som en del af Grundfos-monterings- og driftsinstruktionen.

### DE: EG-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte DDA, DDC und DDE, auf die sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmen:

- Maschinenrichtlinie (2006/42/EG).  
Normen, die verwendet wurden: EN 809: 1998, EN ISO 12100-1+A1: 2009, EN ISO 12100-2+A1: 2009.
- Niederspannungsrichtlinie (2006/95/EG). \*  
Norm, die verwendet wurde: EN 61010-1: 2001 (zweite Ausgabe).
- EMV-Richtlinie (2004/108/EG).  
Normen, die verwendet wurden: EN 61326-1: 2006, EN 61000-3-2: 2006+A1: 2009+A2: 2009, EN 61000-3-3: 2008.

\* Nur für Produkte mit Betriebsspannungen > 50 VAC oder > 75 VDC.

Diese EG-Konformitätserklärung gilt nur, wenn sie in Verbindung mit der Grundfos Montage- und Betriebsanleitung veröffentlicht wird.

### EE: EL vastavusdeklaratsioon

Meie, Grundfos, deklareerime enda ainuvastutusel, et tooted DDA, DDC ja DDE, mille kohta käesolev juhend käib, on vastavuses EU Nõukogu direktiividega EMÜ liikmesriikide seaduste ühitamise kohta, mis käsitlevad:

- Masinate ohutus (2006/42/EC).  
Kasutatud standardid: EN 809: 1998, EN ISO 12100-1+A1: 2009, EN ISO 12100-2+A1: 2009.
- Madalpinge direktiiv (2006/95/EC). \*  
Kasutatud standard: EN 61010-1: 2001 (teine väljaanne).
- Elektromagnetilise ühilduvuse (EMC direktiiv) (2004/108/EC).  
Kasutatud standardid: EN 61326-1: 2006, EN 61000-3-2: 2006+A1: 2009+A2: 2009, EN 61000-3-3: 2008.

\* Ainult toodete jaoks mille tööpinge on suurem kui > 50 VAC või suurem kui > 75 VDC.

Käesolev EL-i vastavusdeklaratsioon kehtib ainult siis, kui see avaldatakse Grundfos'i paigaldus- ja kasutusjuhendi osana.

# English (GB) Installation and operating instructions

Original installation and operating instructions.

## CONTENTS

	Page
<b>1. Safety instructions</b>	<b>6</b>
1.1 Symbols used in this document	6
1.2 Qualification and training of personnel	6
1.3 Safety instructions for the operator/user	7
1.4 Safety of the system in the event of a failure in the dosing pump	7
1.5 Dosing chemicals	7
<b>2. General information</b>	<b>7</b>
2.1 Warranty	8
2.2 Applications	8
2.3 Improper operating methods	8
2.4 Symbols on the pump	9
2.5 Nameplate	9
2.6 Type key	10
2.7 Product overview	11
<b>3. Technical data / Dimensions</b>	<b>11</b>
3.1 Technical data	11
3.2 Dimensions	13
<b>4. Assembly and installation</b>	<b>14</b>
4.1 Pump assembly	14
4.1.1 Requirements	14
4.1.2 Align and install mounting plate	14
4.1.3 Engage pump in mounting plate	14
4.2 Hydraulic connection	14
4.3 Electrical connection	15
<b>5. Start-up</b>	<b>17</b>
5.1 General notes	17
5.2 Check before commissioning	17
5.3 Start and deaerate the pump	17
<b>6. Operation</b>	<b>17</b>
6.1 Operating elements	17
6.2 Operation modes	18
6.2.1 Manual	18
6.2.2 Pulse	18
6.2.3 Change operation modes	18
6.3 Inputs/outputs	18
6.3.1 External stop	18
6.3.2 Empty and low-level signals	18
6.3.3 Relay outputs	19
6.3.4 Change settings	19
<b>7. Service</b>	<b>20</b>
7.1 Cleaning	20
7.2 Service intervals	20
7.3 Perform service	20
7.3.1 Dosing head overview	20
7.3.2 Dismantling the diaphragm and valves	21
7.3.3 Reassembling the diaphragm and valves	21
7.4 Repairs	21

<b>8. Faults</b>	<b>21</b>
8.1 Indication of faults	21
8.2 List of faults	22
<b>9. Disposal</b>	<b>22</b>

### Warning



**Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.**

## 1. Safety instructions

These installation and operating instructions contain general instructions that must be observed during installation, operation and maintenance of the pump. It must therefore be read by the installation engineer and the relevant qualified operator prior to installation and start-up, and must be available at the installation location at all times.

### 1.1 Symbols used in this document



#### Warning

**If these safety instructions are not observed, it may result in personal injury.**



Caution

**If these safety instructions are not observed, it may result in malfunction or damage to the equipment.**



Note

**Notes or instructions that make the job easier and ensure safe operation.**

### 1.2 Qualification and training of personnel

The personnel responsible for the installation, operation and service must be appropriately qualified for these tasks. Areas of responsibility, levels of authority and the supervision of the personnel must be precisely defined by the operator. If necessary, the personnel must be trained appropriately.

#### Risks of not observing the safety instructions

Non-observance of the safety instructions may have dangerous consequences for the personnel, the environment and the pump and may result in the loss of any claims for damages.

It may lead to the following hazards:

- Personal injury from exposure to electrical, mechanical and chemical influences.
- Damage to the environment and personal injury from leakage of harmful substances.

### 1.3 Safety instructions for the operator/user

The safety instructions described in these instructions, existing national regulations on health protection, environmental protection and for accident prevention and any internal working, operating and safety regulations of the operator must be observed. Information attached to the pump must be observed. Leakages of dangerous substances must be disposed of in a way that is not harmful to the personnel or the environment.

Damage caused by electrical energy must be prevented, see the regulations of the local electricity supply company.

#### Caution

**Before starting work on the pump, the pump must be disconnected from the mains. The system must be pressureless!**

#### Note

**The mains plug is the separator separating the pump from the mains.**

Only original accessories and original spare parts should be used. Using other parts can result in exemption from liability for any resulting consequences.

### 1.4 Safety of the system in the event of a failure in the dosing pump

The dosing pump was designed according to the latest technologies and is carefully manufactured and tested.

If it fails regardless of this, the safety of the overall system must be ensured. Use the relevant monitoring and control functions for this.

#### Caution

**Make sure that any chemicals that are released from the pump or any damaged lines do not cause damage to system parts and buildings.**

**The installation of leak monitoring solutions and drip trays is recommended.**

### 1.5 Dosing chemicals

#### Warning



**Before switching the supply voltage back on, the dosing lines must be connected in such a way that any chemicals in the dosing head cannot spray out and put people at risk. The dosing medium is pressurised and can be harmful to health and the environment.**

#### Warning

**When working with chemicals, the accident prevention regulations applicable at the installation site should be applied (e.g. wearing protective clothing).**

**Observe the chemical manufacturer's safety data sheets and safety instructions when handling chemicals!**

#### Warning

**If the diaphragm leaks or is broken, dosing liquid will escape from the drain opening on the dosing head (see fig. 2).**

**Take suitable precautions to prevent harm to health and damage to property from escaping dosing liquid!**

**Check daily whether liquid is escaping from the discharge opening!**

**Changing the diaphragm, see section 7. Service.**



#### Caution

**A deaeration hose, which is routed into a container, e.g. a drip tray, must be connected to the deaeration valve.**

#### Caution

**The dosing medium must be in liquid aggregate state!**

**Observe the freezing and boiling points of the dosing medium!**

#### Caution

**The resistance of the parts that come into contact with the dosing medium, such as the dosing head, valve ball, gaskets and lines, depends on the medium, media temperature and operating pressure.**

**Ensure that parts in contact with the dosing medium are resistant to the dosing medium under operating conditions, see data booklet!**

**Should you have any questions regarding the material resistance and suitability of the pump for specific dosing media, please contact Grundfos.**

## 2. General information

The DDE dosing pump is a self-priming diaphragm pump. It consists of a housing with stepper motor and electronics and a dosing head with diaphragm and valves.



Excellent dosing features of the pump:

- Optimal intake even with degassing media, as the pump always works at full suction stroke volume.
- Continuous dosing, as the medium is sucked up with a short suction stroke, regardless of the current dosing flow, and dosed with the longest possible dosing stroke.

## 2.1 Warranty

A guarantee claim in accordance with our general terms of sale and delivery is only valid if the following requirements are fulfilled:

- The pump is used in accordance with the information within this manual.
- The pump is not dismantled or incorrectly handled.
- The maintenance is carried out by authorised and qualified personnel.
- Original spare parts are used for repairs during maintenance.

## 2.2 Applications

The pump is suitable for liquid, non-abrasive, non-flammable and non-combustible media strictly in accordance with the instructions in these installation and operating instructions.

### Areas of application

- Drinking water treatment
- Wastewater treatment
- Swimming pool water treatment
- Boiler water treatment
- CIP (Clean-In-Place)
- Cooling water treatment
- Process water treatment
- Wash plants
- Chemical industry
- Ultrafiltration processes and reverse osmosis
- Irrigation
- Paper and pulp industry
- Food and beverage industries.

## 2.3 Improper operating methods

The operational safety of the pump is only guaranteed if it is used in accordance with section 2.2 Applications.

### Warning

***The other applications or the operation of pumps in ambient and operating conditions, which are not approved, are considered improper and are not permitted. Grundfos cannot be held liable for any damage resulting from incorrect use.***



### Warning

***The pump is NOT approved for operation in potentially explosive areas!***







### Warning

***A sunscreen is required for outdoor installation!***



## 2.4 Symbols on the pump

Symbol	Description
	Indication of universally dangerous spot.
	In case of emergency and prior to all maintenance work and repairs, take the mains plug out of the mains supply!
	The device complies with electrical safety class II.
	Connection for deaeration hose at dosing head. If the deaeration hose is not correctly connected, danger will arise due to possible leakage of dosing liquid!

## 2.5 Nameplate

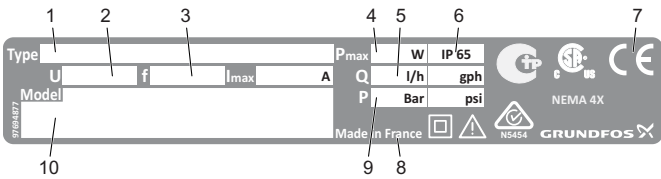


Fig. 1 Nameplate

Pos.	Description	Pos.	Description
1	Type designation	6	Enclosure class
2	Voltage	7	Mark of approval, CE mark, etc.
3	Frequency	8	Country of origin
4	Power consumption	9	Max. operating pressure
5	Max. dosing flow	10	Model

TMO4 8144 1313


## 2.6 Type key

The type key is used to identify the precise pump and is not used for configuration purposes.

Code	Example	DDE	6-	10	P-	PP/	V/	C-	X-	3	1	U2U2	F	G
	Pump type													
	Max. flow [l/h]													
	Max. pressure [bar]													
	<b>Control variant</b>													
B	Basic													
P	B with pulse mode													
PR	P with relay output													
	<b>Dosing head material</b>													
PP	Polypropylene													
PVC	PVC (polyvinyl chloride, only up to 10 bar)													
PV	PVDF (polyvinylidene fluoride)													
SS	Stainless steel DIN 1.4401													
	<b>Gasket material</b>													
E	EPDM													
V	FKM													
T	PTFE													
	<b>Valve ball material</b>													
C	Ceramic													
SS	Stainless steel DIN 1.4401													
	<b>Control cube position</b>													
X	No control cube													
	<b>Voltage</b>													
3	1 x 100-240 V, 50/60 Hz													
	<b>Valve type</b>													
1	Standard													
2	Spring-loaded (HV version)													
	<b>Suction/discharge side connection</b>													
U2U2	Hose, 4/6 mm, 6/9 mm, 6/12 mm, 9/12 mm													
U7U7	Hose 0.17" x 1/4"; 1/4" x 3/8"; 3/8" x 1/2"													
AA	Threaded Rp 1/4", female (stainless steel)													
VV	Threaded 1/4" NPT, female (stainless steel)													
XX	No connection													
	<b>Installation set*</b>													
I001	Hose, 4/6 mm (up to 7.5 l/h, 13 bar)													
I002	Hose, 9/12 mm (up to 60 l/h, 9 bar)													
I003	Hose, 0.17" x 1/4" (up to 7.5 l/h, 13 bar)													
I004	Hose, 3/8" x 1/2" (up to 60 l/h, 10 bar)													
	<b>Mains plug</b>													
F	EU													
B	USA, Canada													
G	UK													
I	Australia, New Zealand, Taiwan													
E	Switzerland													
J	Japan													
L	Argentina													
	<b>Design</b>													
G	Grundfos													

\* Including: 2 pump connections, foot valve, injection unit, 6 m PE discharge hose, 2 m PVC suction hose, 2 m PVC deaeration hose (4/6 mm).

## 2.7 Product overview

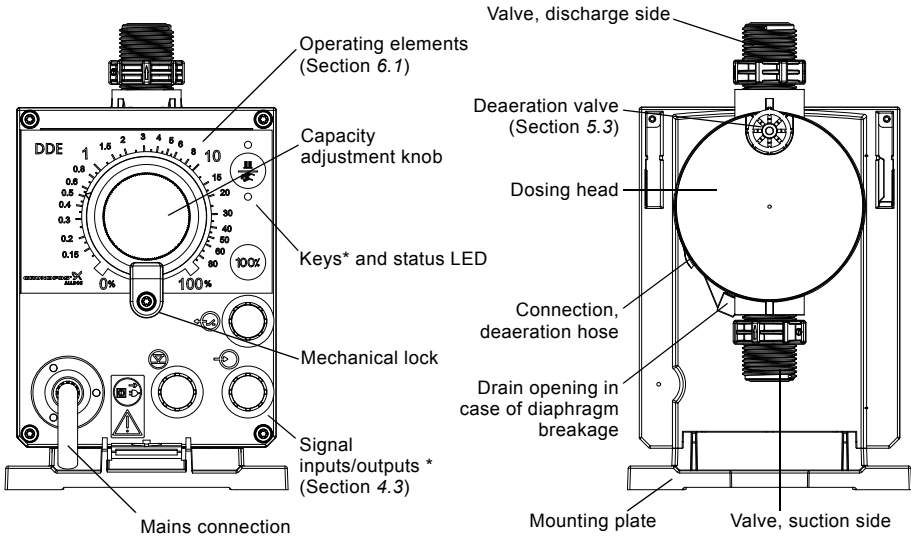

TM04 1149 5111

\* only control variant DDE-PR/P

Fig. 2 Overview

## 3. Technical data / Dimensions



### 3.1 Technical data

Data		6-10	15-4	
Mechanical data	Turndown ratio (setting range)	[1:X]	1000	1000
	Max. dosing capacity	[l/h]	6.0	15.0
		[gph]	1.5	4.0
	Min. dosing capacity	[l/h]	0.006	0.015
		[gph]	0.0015	0.0040
	Max. operating pressure	[bar]	10	4
		[psi]	150	60
	Max. stroke frequency	[strokes/min]	140	180
	Stroke volume	[ml]	0.81	1.58
	Accuracy of repeatability	[%]	± 5	
	Max. suction lift during operation <sup>1)</sup>	[m]	6	
	Max. suction lift when priming with wet valves <sup>1)</sup>	[m]	2	3
Min. pressure difference between suction and discharge side	[bar]	1		



Data		6-10	15-4
<b>Mechanical data</b>	Max. inlet pressure, suction side [bar]	2	
	Max. viscosity with spring-loaded valves <sup>2)</sup> [mPas] (= cP)	600	500
	Max. viscosity without spring-loaded valves <sup>2)</sup> [mPas] (= cP)	50	
	Min. internal hose/pipe diameter suction/discharge side <sup>1), 3)</sup> [mm]	4	6
	Min. internal hose/pipe diameter suction/discharge side (high viscosity) <sup>3)</sup> [mm]	9	
	Min./Max. liquid temperature [°C]	-10/45	
	Min./Max. ambient temperature [°C]	0/45	
	Min./Max. storage temperature [°C]	-20/70	
	Max. relative humidity (non-condensing) [%]	96	
Max. altitude above sea level [m]	2000		
<b>Electrical data</b>	Voltage [V]	100-240 V, - 10 %/+ 10 %, 50/60 Hz	
	Length of mains cable [m]	1.5	
	Max. inrush current for 2 ms (100 V) [A]	8	
	Max. inrush current for 2 ms (230 V) [A]	25	
	Max. power consumption P <sub>1</sub> [W]	19	
	Enclosure class	IP65, Nema 4X	
	Electrical safety class	II	
Pollution degree	2		
<b>Signal input</b>	Max. load for level input	12 V, 5 mA	
	Max. load for pulse input	12 V, 5 mA	
	Max. load for external stop input	12 V, 5 mA	
	Min. pulse length [ms]	5	
	Max. pulse frequency [Hz]	100	
Max. resistance in level/pulse circuit [Ω]	1000		
<b>Signal output</b>	Max. ohmic load on relay output [A]	0.5	
	Max. voltage on relay output [V]	30 VDC/30 VAC	
<b>Weight/size</b>	Weight (PVC, PP, PVDF) [kg]	2.4	
	Weight (stainless steel) [kg]	3.2	
	Diaphragm diameter [mm]	44	50
<b>Sound pressure</b>	Max. sound pressure level [dB(A)]	60	
<b>Approvals</b>	CE, CB, CSA-US, NSF61, GOST, C-Tick		


<sup>1)</sup> Data is based on measurements with water

<sup>2)</sup> Maximum suction lift: 1 m, dosing capacity reduced (approx. 30 %)

<sup>3)</sup> Length of suction line: 1.5 m, length of discharge line: 10 m (at max. viscosity)

### 3.2 Dimensions

The indicated dimensions are the same for all control variants of the DDE range.  
The following drawing shows the DDE-PR control variant.

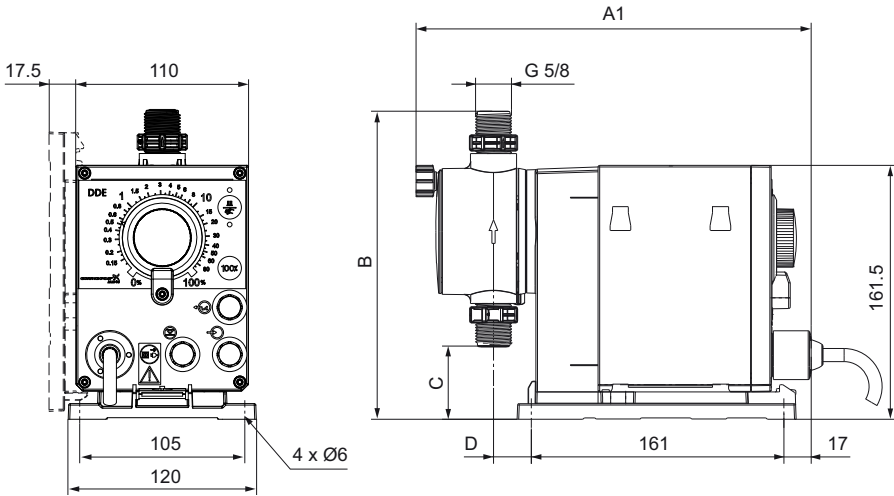

TM04 11-47 5111

**Fig. 3** Dimensional sketch

Pump type	A1 [mm]	B [mm]	C [mm]	D [mm]
DDE 6-10	251	196	46.5	24
DDE 15-4	251	200.5	39.5	24

## 4. Assembly and installation

**For use in Australia:**

**Installation of this product must comply with AS/NZS3500!**

Note

**Certificate of suitability number: CS9431**

**c-tick number: N20683**



### 4.1 Pump assembly

#### Warning

**Install the pump in such a way that the plug can easily be reached by the operator during operation! This will enable the operator to separate the pump from the mains quickly in case of emergency!**



The pump is delivered with a mounting plate. The mounting plate can be mounted vertically, e.g. on a wall, or horizontally, e.g. on a tank. It takes just a few quick steps to firmly secure the pump to the mounting plate by means of a slot mechanism.

The pump can easily be released from the mounting plate for maintenance.

#### 4.1.1 Requirements

- The mounting surface must be stable and must not vibrate.
- Dosing must flow upwards vertically.

#### 4.1.2 Align and install mounting plate

- **Vertical installation:** Mounting plate slot mechanism must be above.
- **Horizontal installation:** Mounting plate slot mechanism must be opposite the dosing head.
- The mounting plate can be used as a drill template, please see fig. 3 for drill hole distances.

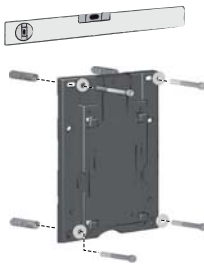


Fig. 4 Locate mounting plate



#### Warning

**Make sure that you do not damage any cables and lines during installation!**

1. Indicate drill holes.
2. Drill holes.
3. Secure mounting plate using four screws, diameter 5 mm, to the wall, on the bracket or the tank.

### 4.1.3 Engage pump in mounting plate

1. Attach the pump to the mounting plate support clamps and slide under slight pressure until it engages.

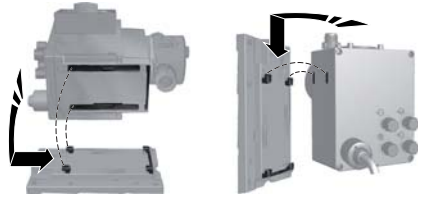


Fig. 5 Engaging the pump

### 4.2 Hydraulic connection

#### Warning

**Risk of chemical burns!**

**Wear protective clothing (gloves and goggles) when working on the dosing head, connections or lines!**



**The dosing head may contain water from the factory check!**

Caution

**When dosing media which should not come into contact with water, another medium must be dosed beforehand!**

Caution

**Faultless function can only be guaranteed in conjunction with lines supplied by Grundfos!**

Caution

**The lines used must comply with the pressure limits as per section 3.1 Technical data!**

#### Important information on installation

- Observe suction lift and hose diameter, see section 3.1 Technical data.
- Shorten hoses at right angles.
- Ensure that there are no loops or kinks in the hoses.
- Keep suction line as short as possible.
- Route suction line up towards the suction valve.
- Installing a filter in the suction line protects the entire installation against dirt and reduces the risk of leakage.

TM04 1162 0110

TM04 1159 0110

### Hose connection procedure

1. Push union nut and tensioning ring across hose.
2. Push cone part fully into the hose, see fig. 6.
3. Attach cone part with hose to the corresponding pump valve.
4. Tighten union nut manually.
  - Do not use tools!
5. Tighten up union nuts after 2-5 operating hours, if using PTFE gaskets!
6. Attach deaeration to the corresponding connection (see fig. 2) and run into a container or a collecting tray.

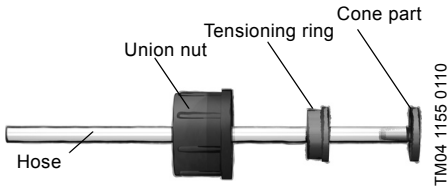


Fig. 6 Hydraulic connection

#### Note

**Pressure differential between suction and discharge side must be at least 1 bar/14.5 psi!**

#### Caution

**Tighten up the dosing head screws once before commissioning and after 2-5 operating hours at 3 Nm.**

### Installation example

The pump offers various installation options. In the picture below, the pump is installed in conjunction with a suction line, level switch and multifunction valve on a Grundfos tank.

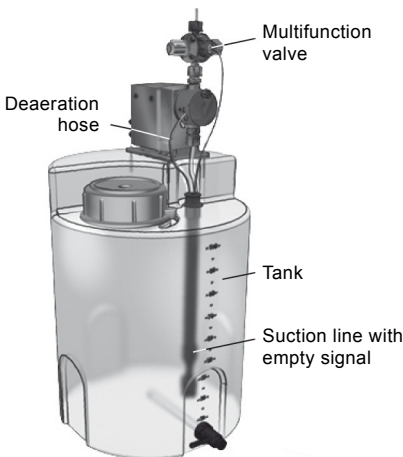


Fig. 7 Installation example

## 4.3 Electrical connection

### Mains connection



#### Warning

**The enclosure class (IP65/Nema 4X) is only guaranteed if plugs or protective caps are correctly installed!**



#### Warning

**The pump can start automatically when the mains voltage is switched on! Do not manipulate mains plug or cable!**

**The mains plug is the separator separating the pump from the mains.**

#### Note

**The rated voltage of the pump, see section 2.5 Nameplate, must conform to local conditions.**

The pump is supplied with assembled mains cable and plug.

1. Set capacity adjustment knob to 0 % (see 6.1 Operating elements).
2. Connect the mains plug with the mains socket.


**Signal connections**

Applies to DDE-PR/P control variant.



**Warning**

Electric circuits of external devices connected to the pump inputs must be separated from dangerous voltage by means of double or reinforced insulation!

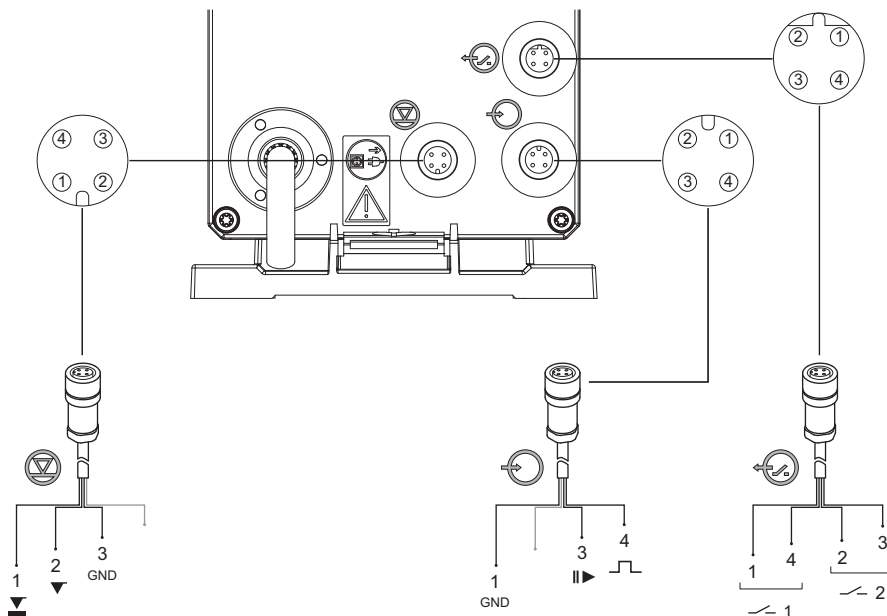

TM04 8172 5111

**Fig. 8** Wiring diagram of the electrical connections (DDE-PR/P)

**External stop and pulse input**

Function	Pins				Plug type
	1/brown	2/white	3/blue	4/black	
External stop	GND		X		Pulse
Pulse	GND			X	Pulse

**Level signals: empty and low-level signal**

Function	Pins				Plug type
	1	2	3	4	
Low-level signal	X		GND		Pulse
Empty signal		X	GND		Pulse

**Relay outputs\***

Function	Pins				Plug type
	1/brown	2/white	3/blue	4/black	
Relay 1 (Alarm)	X			X	Pulse
Relay 2 (selectable)		X	X		Pulse

\* applies to DDE-PR control variant

## 5. Start-up



### 5.1 General notes



**Warning**

**Suction and discharge hoses must be connected correctly!**  
**The deaeration hose must be connected correctly and inserted into a suitable tank!**



**Tighten up the dosing head screws once before commissioning and after 2-5 operating hours at 3 Nm.**

### 5.2 Check before commissioning

- Check that the rated voltage indicated on the nameplate complies with the local conditions.
- Check that all connections are assembled correctly. Tighten connections, if necessary.
- Check that the dosing head screws are tightened with the indicated torque (3 Nm). Tighten dosing head screws, if necessary.
- Check that all electrical cables and plugs are connected correctly.

### 5.3 Start and deaerate the pump


1. Connect mains supply (see 4.3 *Electrical connection*).
2. Open the deaeration valve by approximately half a turn.
3. DDE-PR/P control variant: Press the [100 %] key and hold it down, until liquid flows out of the deaeration hose continuously and without any bubbles.
4. DDE-B control variant: Turn the capacity adjustment knob to 100 % and wait, until liquid flows out of the deaeration hose continuously and without any bubbles. Then set the capacity adjustment knob back to 0 %.
5. Close the deaeration valve.

The pump is deaerated.

## 6. Operation



### 6.1 Operating elements

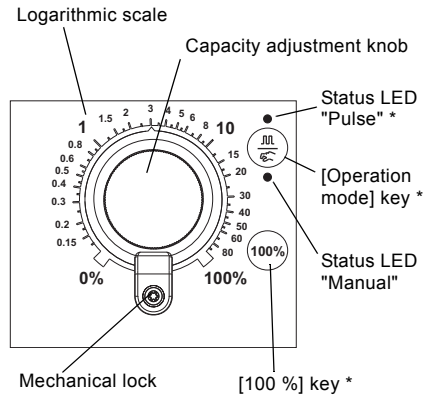

**Fig. 9** Operating elements

\* Applies to DDE-PR/P control variant.

#### Capacity adjustment knob

The capacity adjustment knob is used to set the capacity in percent of the maximum dosing flow of the pump. Due to the logarithmical increase of the percent values, even small dosing capacities can be set accurately.

#### Mechanical lock

The mechanical lock protects the set dosing capacity against unauthorised manipulation. For locking, tighten the screw until the adjustment knob cannot be turned anymore.

#### Keys and LEDs



**The DDE-B control variant is only equipped with a status LED.**

When pressing and holding down the [100 %] key, the pump doses at 100 % for a certain time.

The [100 %] key can be used e.g. for deaeration.

The [Operation mode] key is used to change between the "Manual" and "Pulse" mode (see section 6.2.3). According to the selected operation mode, the respective status LED is active ("Pulse" = LED above key; "Manual" = LED below key).

TM04 1150 5111

The status LEDs indicate the following operating statuses and faults:

LED colour	Pump status/fault
Green (flashing)	stop
Green	running
Red-green (flashing)	standby (external stopped) *
Yellow	low-level signal *
Red	empty signal, pump stops *
Red (flashing)	motor blocked, pump stops

\* only DDE-PR/P control variant

## 6.2 Operation modes

Following operation modes are available:

- **Manual**, see section 6.2.1
- **Pulse \***, see section 6.2.2

\* Applies to DDE-PR/P control variant.

### 6.2.1 Manual

In this operation mode, the pump doses constantly the dosing quantity set by the adjustment knob.

The setting range depends on the pump type:

Type	Setting range [l/h]
DDE 6-10	0.0060 - 6
DDE 15-4	0.0150 - 15

### 6.2.2 Pulse

*Applies to DDE-PR/P control variant.*

In this operation mode, the pump doses the set dosing volume for each incoming (potential-free) pulse, e.g. from a water meter. The pump automatically calculates the optimum stroke frequency for dosing the set volume per pulse.

The calculation is based on:

- the frequency of external pulses
- the set stroke volume in percent.

The dosing quantity per pulse is set to a value between 0.1 % and 100 % of the stroke volume using the adjustment knob.

The setting range depends on the pump type:

Type	Setting range [ml/pulse]
DDE 6-10	0.0008 - 0.81
DDE 15-4	0.0016 - 1.58

The frequency of incoming pulses is multiplied by the set dosing volume. If the pump receives more pulses than it can process at the maximum dosing flow, it runs at the maximum stroke frequency in continuous operation. Excess pulses will be ignored.

## 6.2.3 Change operation modes

*Applies to DDE-PR/P control variant.*

1. Set adjustment knob to 0 %.
2. Connect mains supply (see section 4.3 *Electrical connection*).
3. Hold down the [Operation mode] key for at least 5 seconds.

The new operation mode is saved.

## 6.3 Inputs/outputs

*Applies to DDE-PR/P control variant.*

### 6.3.1 External stop

The pump can be stopped via an external pulse, e.g. from a control room. When activating the external stop pulse, the pump switches from the operating state "Running" into the operating state "Standby". According to the selected operation mode, the respective LED flashes red-green.

### 6.3.2 Empty and low-level signals

In order to monitor the filling level in the tank, a dual-level sensor can be connected to the pump. The pump responds to the signals as follows:

Sensor signal	Pump status
Low level	<ul style="list-style-type: none"> <li>• LED lights up in yellow</li> <li>• Pump continues running</li> </ul>
Empty	<ul style="list-style-type: none"> <li>• LED lights up in red</li> <li>• Pump stops</li> </ul>

**Caution** *When the tank is filled up again, the pump restarts automatically!*

### 6.3.3 Relay outputs

Applies to DDE-PR control variant.

The pump can switch two external signals using installed relays. The relays are switched by potential-free pulses. The connection diagram of the relays is shown in section 4.3 *Electrical connection*.

Relay 1 is allocated with the alarm signals (tank empty, motor blocked) as standard. Relay 2 can be allocated with the following signals:

Relay 2 signal	Description
Low-level signal *	low level in tank
Stroke signal	each full stroke
Pulse input **	each incoming pulse from pulse input

\* Default setting



\*\* The correct transmission of incoming pulses can only be guaranteed up to a pulse frequency of 5 Hz.

### 6.3.4 Change settings

The signal inputs (level signals, external stop) and the relay outputs are configured at the factory as normally open (NO) contacts. They can be re-configured as normally closed (NC) contacts. Relay 2 can be allocated with different signals.

The activated settings are indicated by the status LEDs when the pump is in the setup mode. For entering the setup mode and changing settings, proceed as follows:

1. Set adjustment knob to 0 %.
2. Connect mains supply (see section 4.3 *Electrical connection*).
3. Press [100 %] key and [Operation mode] key simultaneously and hold them down for at least 5 seconds.
  - The pump switches into setup mode 1. The active setup mode is indicated by the color of the upper status LED. The current setting is indicated by the color of the lower status LED.
4. Make the desired settings according to the following table:

		Switch setup modes with [Operation mode] key 		
		Setup mode 1 Green	Setup mode 2 * Yellow	Setup mode 3 * Red
upper status LED		Green	Yellow	Red
setup mode description		Contact type of signal inputs (low-level, empty and external stop)	Contact type of relay outputs	Allocated signal of Relay 2
Change setting with [100 %] key 	lower status LED	Green	NO **	Low-level signal **
		Yellow	NC	stroke signal
		Red	–	pulse input

\* Only DDE-PR control variant

\*\* Default setting

5. To exit setup mode, keep [100%] key and [Operation mode] key simultaneously pressed for at least 1 second.



## 7. Service



In order to ensure a long service life and dosing accuracy, wearing parts such as diaphragms and valves must be regularly checked for signs of wear. Where necessary, replace worn parts with original spare parts made from suitable materials.

Should you have any questions, please contact your service partner.

### 7.1 Cleaning

If necessary, clean all pump surfaces with a dry and clean cloth.

### 7.2 Service intervals

#### Warning

**If the diaphragm leaks or is broken, dosing liquid will escape from the drain opening on the dosing head (see fig. 2).**

**Take suitable precautions to prevent harm to health and damage to property caused by escaping dosing liquid!**

**Check daily whether liquid is escaping from the drain opening!**



Interval	Task
Every day	Check, if liquid leaks from dosing head, drain opening or valves (see fig. 2). If necessary, tighten dosing head screws (3 Nm), valves and cap nuts, or perform service (see 7.3 Perform service).
Every 2 years or 8000 operating hours	Replace diaphragm and valves (see 7.3 Perform service)

## 7.3 Perform service

Only spare parts and accessories from Grundfos should be used for maintenance. The usage of non-original spare parts and accessories renders any liability for resulting damages null and void.

Information about carrying out maintenance can be found in the service kit catalog on our homepage ([www.grundfosalldos.com](http://www.grundfosalldos.com)).

#### Warning

**Risk of chemical burns!**

**When dosing dangerous media, observe the corresponding precautions in the safety data sheets!**

**Wear protective clothing (gloves and goggles) when working on the dosing head, connections or lines!**


**Do not allow any chemicals to leak from the pump. Collect and dispose of all chemicals correctly!**



#### Caution

**Before any work to the pump, the pump must be disconnected from the mains. The system must be pressureless!**

### 7.3.1 Dosing head overview

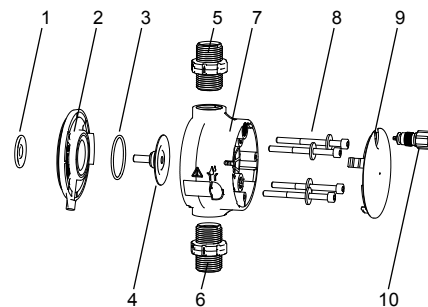

TM04 1123 2110

**Fig. 10** Dosing head, exploded view

1	Safety diaphragm
2	Flange
3	O-ring
4	Diaphragm
5	Valve on discharge side
6	Valve on suction side
7	Dosing head
8	Screws with discs
9	Cover
10	Deaeration valve

### 7.3.2 Dismantling the diaphragm and valves

1. Make system pressureless.
2. Empty the dosing head before maintenance and flush it, if necessary.
3. Set adjustment knob to 0 %.
4. Switch off mains supply.
5. Take suitable steps to ensure that the returning liquid is safely collected.
6. Dismantle suction, pressure and deaeration hoses.
7. Dismantle valves on suction and discharge side (5, 6).
8. Remove the cover (9).
9. Loosen screws (8) on the dosing head (7) and remove the screws and discs.
10. Remove the dosing head (7).
11. Unscrew diaphragm (4) counter-clockwise and remove with flange (2).

### 7.3.3 Reassembling the diaphragm and valves

1. Attach flange (2) correctly and screw on new diaphragm (4) clockwise.
  - Make sure that the O-ring (3) is seated correctly!
2. Connect/switch on mains supply.
3. Turn the adjustment knob slowly to bring the diaphragm into its service position "inside" (end of suction phase, diaphragm retracted). Set adjustment knob back to 0 %.
4. Switch off mains supply again.
5. Attach the dosing head (7).
6. Install screws with discs (8) and cross-tighten.
  - Torque: 3 Nm.
7. Attach the cover (9).
8. Install new valves (5, 6).
  - Do not interchange valves and pay attention to direction of arrow.
9. Connect suction, pressure and deaeration hoses (see section 4.2 *Hydraulic connection*).
10. Deaerate dosing pump (see section 5.3 *Start and deaerate the pump*).
11. Please observe the notes on commissioning in section 5. *Start-up!*

## 7.4 Repairs

### Warning

**The pump housing must only be opened by personnel authorised by Grundfos!**

**Repairs must only be carried out by authorised and qualified personnel!**

**Switch off the pump and disconnect it from the voltage supply before carrying out maintenance work and repairs!**



After consulting Grundfos, please send the pump, together with the safety declaration completed by a specialist, to Grundfos. The safety declaration can be found at the end of these instructions. It must be copied, completed and attached to the pump.

**If the pump has been used to dose toxic liquids or liquids hazardous to health, the pump must be cleaned prior to dispatch!**

### Caution

If the above requirements are not met, Grundfos may refuse to accept delivery of the pump. The shipping costs will be charged to the sender.

## 8. Faults



### 8.1 Indication of faults

Depending on the selected operation mode, the pump indicates the following faults with its LEDs:

LED colour	Fault	Remedy
Yellow	low-level signal	<ul style="list-style-type: none"> <li>• fill tank</li> <li>• check contact type (see section 6.3.4).</li> </ul>
Red	empty signal	<ul style="list-style-type: none"> <li>• fill tank</li> <li>• check contact type (see section 6.3.4).</li> </ul>
Red (flashing)	motor blocked	<ul style="list-style-type: none"> <li>• reduce backpressure</li> <li>• have gear repaired, if necessary.</li> </ul>

For further faults, please see 8.2 *List of faults*.

## 8.2 List of faults

Fault	Possible cause	Possible remedy
Dosing flow too high	Inlet pressure greater than backpressure	Install additional spring-loaded valve (approx. 3 bar) on the discharge side. Increase pressure differential.
	Air in dosing head	Deaerate the pump.
No dosing flow or dosing flow too low	Faulty diaphragm	Change the diaphragm (see section 7.3 <i>Perform service</i> ).
	Leakage/fracture in lines	Check and repair lines.
	Valves leaking or blocked	Check and clean valves.
	Valves installed incorrectly	Check that the arrow on the valve housing is pointing in the direction of flow. Check whether all O-rings are installed correctly.
	Blocked suction line	Clean suction line/install filter.
	Suction lift too high	Reduce suction lift. Install priming aid.
	Viscosity too high	Use hose with larger diameter. Install spring-loaded valve on the discharge side.
	Deaeration valve open	Close the deaeration valve.
Irregular dosing	Valves leaking or blocked	Tighten up valves, replace valves if necessary (see section 7.3 <i>Perform service</i> ).
	Backpressure fluctuations	Keep backpressure constant.
Liquid escaping from the drain opening on the flange	Faulty diaphragm	Change the diaphragm (see section 7.3 <i>Perform service</i> ).
Liquid escaping	Dosing head screws not tightened	Tighten up screws (see section 4.2 <i>Hydraulic connection</i> ).
	Valves not tightened	Tighten up valves/union nuts (see section 4.2 <i>Hydraulic connection</i> ).
Pump not sucking in	Suction lift too high	Reduce suction lift; if necessary, provide positive inlet pressure.
	Backpressure too high	Open the deaeration valve.
	Soiled valves	Flush system, replace valves if necessary (see section 7.3 <i>Perform service</i> ).

## 9. Disposal

This product or parts of it must be disposed of in an environmentally sound way.

Use appropriate waste collection services.

If this is not possible, contact the nearest Grundfos company or service workshop.



Subject to alterations.

Distributed by:  
Astles Control Systems Ltd.  
B3 Regent Park  
Summerleys Road  
Princes Risborough  
HP27 9LE  
UK  
T: +44 (0) 1844 273301 E: [sales@astles.co.uk](mailto:sales@astles.co.uk)

The name Grundfos, the Grundfos logo, and the payoff Be-Think-Innovate are registered trademarks owned by Grundfos Management A/S or Grundfos A/S, Denmark. All rights reserved worldwide.

---